



**SERIAL EXPRESS CARD**  
**1 Port RS-232 ExpressCard/34**



**USER MANUAL**  
XRS232EXC

[www.hamletcom.com](http://www.hamletcom.com)

Dear Customer,

thanks for choosing an Hamlet product. Please carefully follow the instructions for its use and maintenance and, once this item has run its life span, we kindly ask You to dispose of it in an environmentally friendly way, by putting it in the separate bins for electrical/electronic waste, or to bring it back to your retailer who will collect it for free.



We inform You this product is manufactured with materials and components in compliance with ROHS directives: 2002/95/CE; with RAEE Directives: 2003/96/CE, Italian Legislative Decree 2005/151 and below EEC Directives: EN 55022: 2006+A1: 2007, EN 55024: 1998+A1: 2001+A2: 2003, EN 61000-3-2: 2006, EN 61000-3-3: 1995+A1: 2001+A2: 2005.

### **Trademarks**

All trademarks and company names mentioned in this manual are used for description purpose only and remain property of their respective owners.

### **Changes**

The material in this document is for information only and subject to change without notice. Hamlet reserves the right to make changes or revisions in the product design or the product manual without reservation and without obligation to notify any person of such revisions and changes.

---

## Introduction

---

### System Requirements

- Windows 2000/XP/Vista/7
- Computer with an available ExpressCard slot

### Package Contents

- RS-232 Serial ExpressCard
- 9pin male-female cable
- Resource CD
- User Manual

---

## Installation

---

1. Insert the card into an available ExpressCard slot.
2. The system will detect the new device and the **Add New Hardware Wizard** will start.
3. Insert the Resource CD and proceed to the installation of the required driver.

---

## Verifying the installation

---

Follow the instructions in this section to verify that the controller was installed correctly.

1. Right click on **My Computer** icon, then click **Manage** and select **Device Manager**.
2. Click on "+" (plus sign) in front of "Ports (COM & LPT)" and "Multi-port serial adapters".
3. If there is no yellow "!" or "?" in front of "PCI Express UART Port" and "PCI Express Multiport Serial Adapter", the driver has been installed correctly.