



**ZELIG PAD 410L3G**  
**10.1" MULTI TOUCH QUAD CORE 3G TABLET PC**



**USER MANUAL**

XZPAD410L3G

[www.hamletcom.com](http://www.hamletcom.com)

Dear Customer,

thanks for choosing an Hamlet product. Please carefully follow the instructions for its use and maintenance and, once this item has run its life span, we kindly ask You to dispose of it in an environmentally friendly way, by putting it in the separate bins for electrical/electronic waste, or to bring it back to your retailer who will collect it for free.



We inform You this product is manufactured with materials and components in compliance with RoHS directive: 2011/65/EU; with RAEE Directives:

2002/96/EC, 2003/108/EC Italian Legislative Decree 2005/151 and ECC

Directive R&TTE 1999/5/EC for the following standards:

EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013

EN 50360: 2001 + A1: 2012, EN 50566: 2013

EN 62209-1: 2006, EN 62209-2: 2010, EN 62479: 2010

EN 301 489-1 V1.9.2, EN 301 489-3 V1.6.1, EN 301 489-7 V1.3.1

EN 301 489-17 V2.2.1, EN 301 489-24 V1.5.1

EN 300 328 V1.8.1, EN 301 511 V9.0.2

EN 301 908-1 V6.2.1, EN 301 908-2 V5.4.1

EN 300 440-1 V1.6.1, EN 300 440-2 V1.4.1



### **CE Mark Warning**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

The complete CE declaration of conformity of the product can be obtained by contacting Hamlet at [info@hamletcom.com](mailto:info@hamletcom.com).

The information on the importer for your country are available in the "About Us" section of the Hamlet website at [www.hamletcom.com](http://www.hamletcom.com).

## **Trademarks and changes**

All trademarks and company names mentioned in this manual are used for description purpose only and remain property of their respective owners.

The material in this document is for information only and subject to change without notice. Specifications and appearance are subject to change without prior notice.

## **Product Registration**

Register now your product on the home page of Hamlet website at [www.hamletcom.com](http://www.hamletcom.com).

## **Warranty information**

The legal warranty is valid for 2 years from the date of purchase for private users with purchase by receipt (1 year for professional users with VAT). The warranty excludes the accessories such as power supply, connecting cables etc. and consumable parts such as batteries.

## **Support**

To obtain technical information or assistance please visit Hamlet website at page <http://english.hamletcom.com/support.aspx>.

If the website service did not resolve your problem or the information received were not exhaustive, please contact directly Hamlet at e-mail address [support.tablet@hamletcom.com](mailto:support.tablet@hamletcom.com).

## **Frequently Asked Questions**

Before use of technical assistance, please find answers to frequently asked questions listed below.

### **I can not connect to download the app from the market**

The tablet have to be updated, contact the technical assistance via the support area of the Hamlet website.

### **Tablet does not start**

Press the reset button on the tablet (if present) for at least 3 seconds and restart the device. If the problem persists, restore the firmware of the tablet following the instructions provided in the support area of the Hamlet website.

### **An accessory of the tablet is not working (e.g. power supply)**

Contact technical support by e-mail to get the replacement of the defective part only at [support.tablet@hamletocm.com](mailto:support.tablet@hamletocm.com).

### **The touch screen does not respond well or is not accurate**

With the battery level close to zero or tablet connected to the power supply, electrical interference may make the tablet touch screen inaccurate. Charging the batteries or disconnecting the power supply is restore full functionality.

### **If I connect the tablet to a PC or pen drive can not transfer files**

To activate the connection between tablet and computer the "Turn on USB storage" must be enabled (see section 4 of the manual). For connecting peripherals such as pen drives, memory card readers or external hard drives a

specific OTG USB cable is required (not included).

## **Android**

Q: What Android OS version is on my device?

A: Android 4.4.

## **Basic Functionality**

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours, but you can use the device while it's being charged. Use the included power adapter to charge.

## **Media Cards**

Q: Which media cards are compatible with my Device?

A: Micro SD cards with capacity up to 32 GB.

## **Music**

Q: What type of music files can I play on my device?

A: MP3, WAV, AAC, WMA.

Q: How do I add music files to my device?

A: Copy the music files from your PC, Micro SD card or USB storage device directly to your device.

## **Photos**

Q: What type of photo files can I view on my device?

A: JPEG, BMP, GIF, PNG.

Q: How do I add photo files to my device?

A: Copy the photos from your PC, Micro SD card or USB storage device.

## **Videos**

Q: What type of video files can I play on my device?

A: Video decoding (Full HD) support all formats of video such as MPEG-4, MOV, AVI, MKV and other popular video formats.

Q: Can I play YouTube videos on my device?

A: Yes, you can use the YouTube application downloadable for free from online markets.

Q: How do I add video files to my device?

A: Copy the video files from your PC, Micro SD card or USB storage device.

## **Wi-Fi**

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No, the Wi-Fi adapter is built-in to the device.

# **1 Introduction**

## **1.1 Package content**

- Zelig Pad 410L3G Tablet PC
- Power Adapter
- USB Cable
- Instruction Manual

## **1.2 Getting started**

Before operating your Tablet PC for the first time, please read this manual carefully and follow the instructions as below.

The instructions and screenshots shown in this manual refer to a generic Android 4.x system and may slightly differ from those of the system installed on your product.

## **1.3 Battery charging**

 
The tablet is equipped with a built-in rechargeable Lithium battery. It is suggested to fully charge the battery before use.

We strongly recommend to use the power adapter included in the packaging, using other adapter may damage the tablet and void the warranty.

### **Charging instructions**

- Connect the power adapter to your tablet, and plug the power adapter to the nearest electrical outlet.
- Users can still use the tablet while it is being charged.

## 2 Appearance and buttons

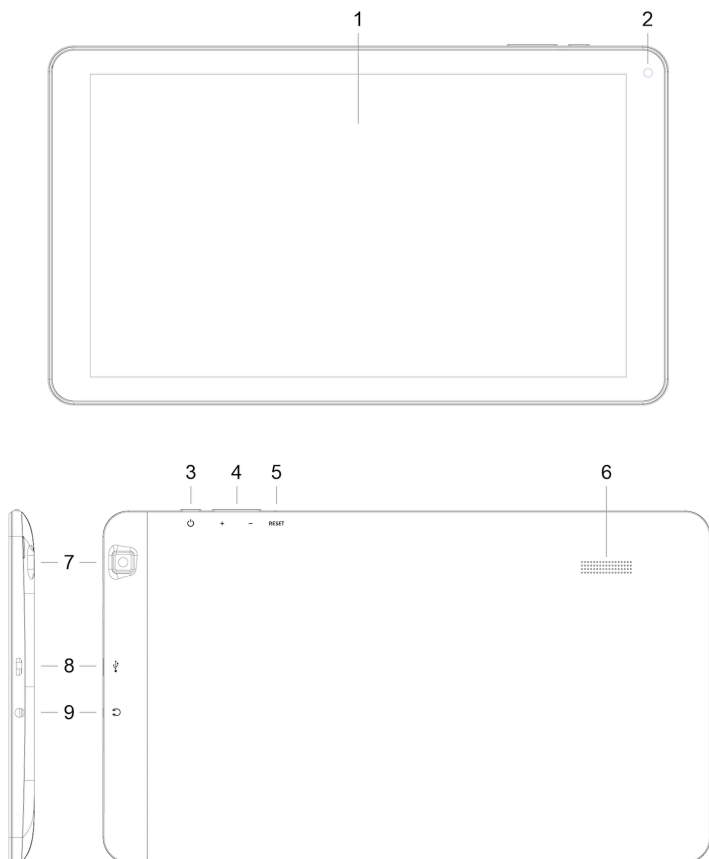



**1. Touch screen**

**2. Front camera**

**3. Power button**

Turn on/off tablet.

**4. Volume buttons**

**5. Reset button**

**6. Speaker**

**7. Back camera**

**8. Micro USB port**

Use this port to recharge the tablet.

Connect to PC for file transfer or connection with external USB devices.

The USB cable must be OTG compliant.

**9. Headphone socket**

3.5 mm standard earphone jack.

**SIM and Micro SD slots**

In this product, the slots for SIM phone card and Micro SD memory card are located under the cover on the back side. To install a SIM or Micro SD card follow these steps.

1. Carefully remove the cover that protect the back camera.
2. Insert the SIM/micro SD card into the SIM/TF slot.
3. Replace the back cover in its original position.

**N.B.** The back cover accommodates the antennas so it's important to replace the cover correctly to ensure optimal Wi-Fi reception.

 
### 3 Turn ON/OFF Tablet

 
**Turn On:** after the battery has been fully charged, press & hold the power button for around 3 seconds to turn on the device. Screen lock will be showed after starting up.

**Turn Off:** When the tablet is ON, press & hold the power button for around 3 seconds and the system will popup out power off option, tap on it to turn the tablet off.

**Lock screen:** quickly press power button and release to lock screen.

**Unlock screen:** slide the lock icon rightward onto the unlock icon to unlock the screen and go to main interface; Slide the lock icon leftward onto the camera icon to open camera.

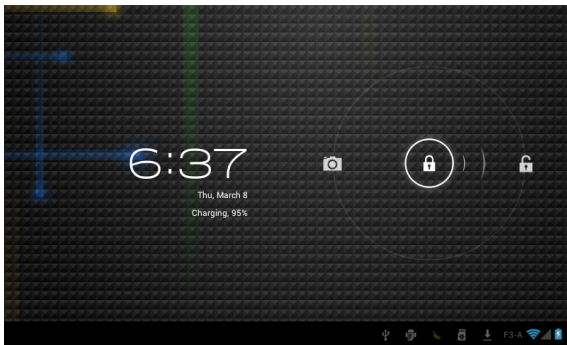

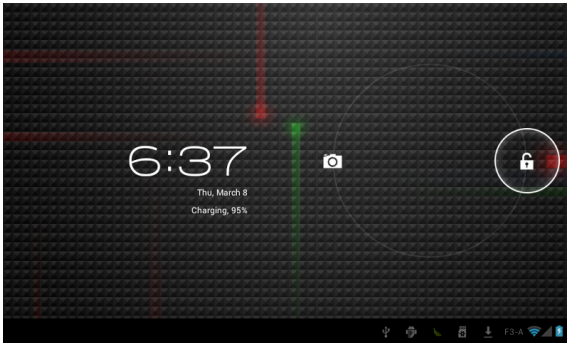


**Remarks:**

- When battery power has been used up, the tablet will shut down itself automatically.
- If you turn off the device improperly, at restart the system will scan and restore the disk, and it may take longer time to enter into system.


## 4 Connecting to a Computer

 Use the USB cable provided to connect the tablet to a computer and transfer files. When the device is connected to a computer, the USB connection window will appear. Tap the **“Turn on USB storage”** button to enable pc connection. When the tablet is connected to your computer, the memory of the device is mounted as an external drive and you can copy files in either direction as when you use any external storage device.

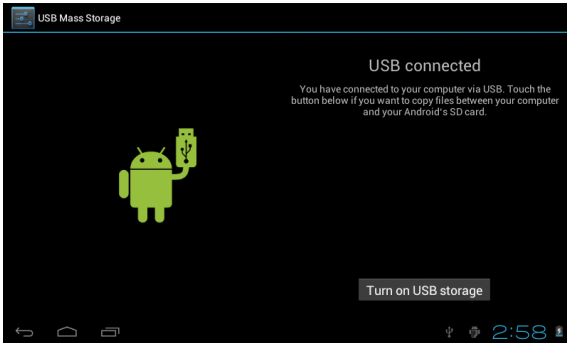


## 5 Tablet Operation Interface

 
After starting up, you will enter into below main screen interface.

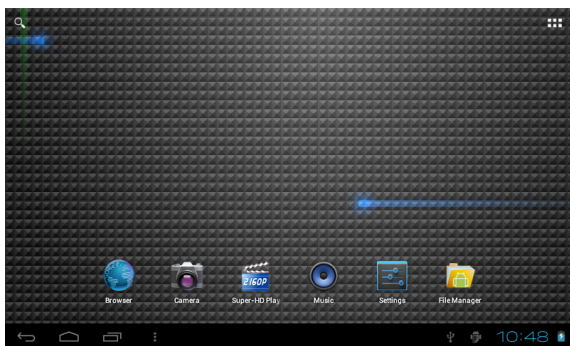


In the main interface, you can manage main interface software icons: press the icon and hold it for 3 seconds, then you can drag anywhere in the main interface.

  Delete icons: press the icon and hold it for 3 seconds, and drag the icon onto the "Remove" icon, then you can delete that icon from desktop.

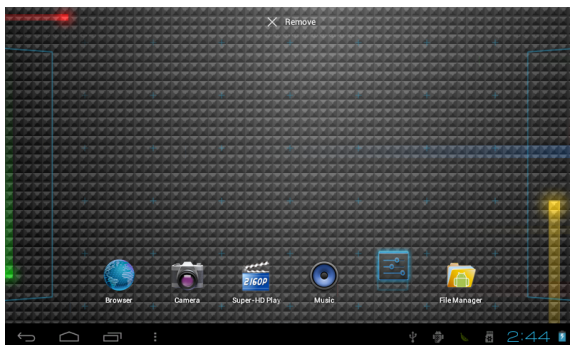

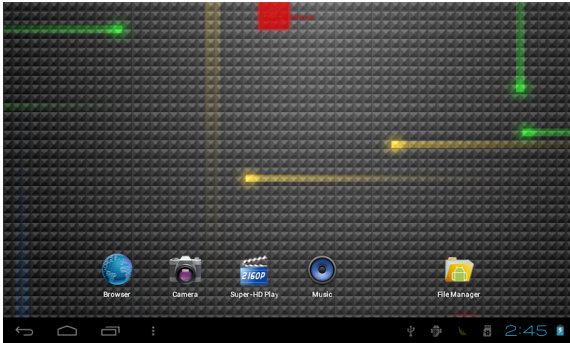

 Touch the screen background and hold for around 4 seconds, the dialog box “Choose wallpaper from” will pop out as shown below:

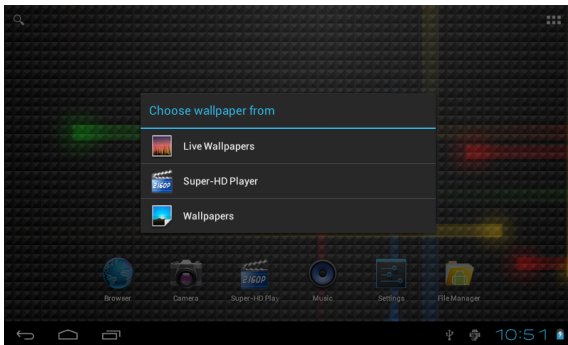


You can choose the wallpaper from different sources and change the wallpaper.

## Status Bar Descriptions




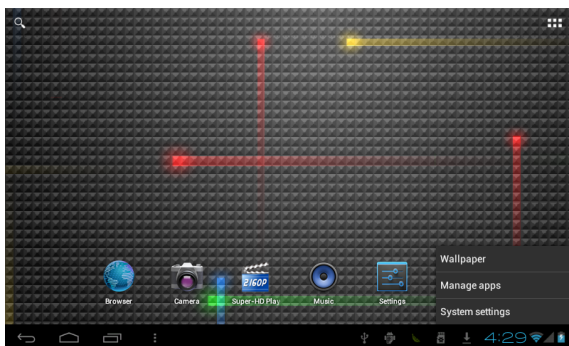 
From left to right: Back to previous interface, Back to main interface, Display the Apps performed previously, Menu key, USB connected, USB connected, USB debugging connected, microSD-card information, Current time, battery charge icons, current time.


## Quick Guide For Touch Operations

 
No matter which interface you are on the screen, you can go back to main screen by tapping the home key  located at the left bottom corner of the main screen.


**Attention:** the home key functions as back to main screen interface.

During options, by tapping the back key  at the left bottom corner of the touch screen, you can return to previous screen interface.



Click  to view the recent Apps.

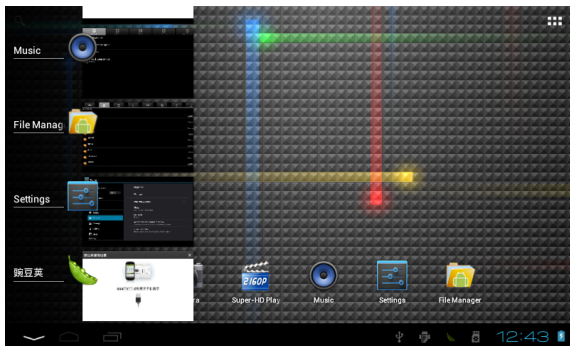


In the main interface, you can touch the icon  to see all the APPS, tap on any App icon and hold it for around 3 seconds, you can drag that App icon onto main screen interface.



## 6 Basic Settings

### 6.1 WIRELESS & NETWORKS

#### ● Wi-Fi

Tap on **setting** icon, then tap on the “OFF” to open Wi-Fi, All available Wi-Fi networks will be listed, tap on your Wi-Fi network and start to connect. If the Wi-Fi network does not need a password, tap “connect” to start the connection. If the Wi-Fi network needs a password, then input the password and tap “connect” to start the connection. If the Wi-Fi network has been successfully connected before, that information will be stored. Connection will be done automatically. Once your tablet connects to Wi-Fi successfully, the Wi-Fi icon  will appear on the status bar at the below of the screen.



 
- **Bluetooth**

Select this option to turn on/off Bluetooth function. The tablet will automatically scan all available Bluetooth devices and list them.




- **Data Usage**

Select to turn on/off Mobile data, Set mobile data limit.

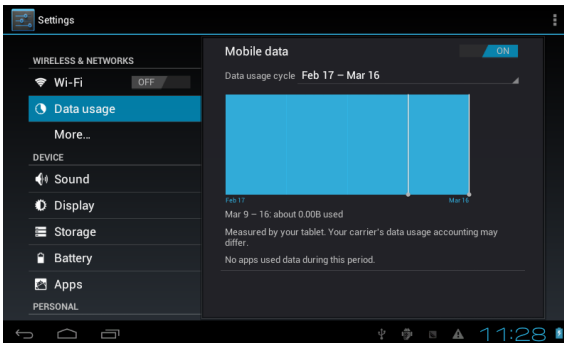

## ● More...

 Select to turn on/off Airplane mode, to setup Ethernet connection, VPN and Mobile networks.

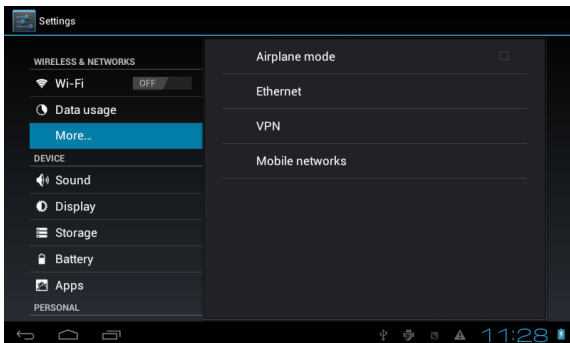

## Configuring the 3G connection

The following steps describe how to configure the device for browsing the Internet via a 3G connection.

Before proceeding to the following configuration please check that the charge of the battery is at least 50%.

1. Turn off Wi-Fi and turn off the Tablet.

2. Enter the phone card (SIM) in the SIM slot and turn on the Tablet.

**Note:** it is recommended to disable the PIN code request (if enabled) of the SIM card using a mobile phone or smartphone before insertion.

3. For the first connection, make sure to be in an area with good coverage of the 3G signal.

**Note:** You can check the coverage with a last generation mobile phone or smartphone (3G symbol should appear on display).

4. After switching on the tablet, wait about 2 minutes to allow the device to be configured for the SIM card.
5. In the lower right of the screen the 3G icon will appear to indicate the signal strength.
6. Enter the "Settings" screen and under "Wireless & Networks" select "More..." and then "Mobile networks".
7. On the "Mobile networks settings" screen verify that the "Modem power" option is enabled. If not turn it on and go back to step 2.
8. Open the "Access Point Names" to view the list of APNs (Access Point Name) provided by your mobile operator (check the correct APN with your mobile operator).
9. Select the desired APN and wait a few seconds. In presence of 3G coverage the icon in the lower right will turn blue.
10. Exit the current screen and verify the access to the Internet via the "Browser" App.

These settings are to be made only to the first insertion of the SIM card. On subsequent reboots of the device it will be configured automatically.

 
Before performing this procedure please contact the customer service of your mobile network provider to check the correct APN connection and the compatibility of the SIM for 3G network connection.

Sometimes it may be useful to reset the tablet to factory settings. For the recovery process, please refer to section 6.3 of this manual.

## 6.2 DEVICE


### ● Sound

Use this screen to manage settings of Volume, Ringtone & Notifications. You can also check or uncheck the options for Vibrate and ring, Touch sounds, Screen lock sound and Vibrate on touch.

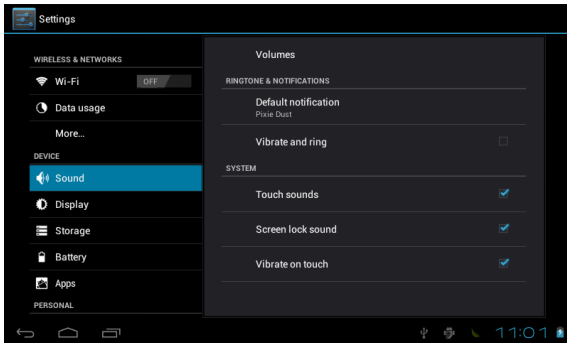


### ● Display

 Settings on LCD Panel brightness, Wallpaper, Auto-rotate screen, sleep, Font size, Accelerometer coordinate system, Screen adaption.

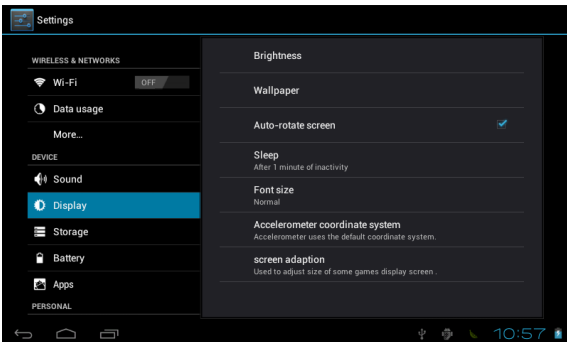

## ● Storage

 To view the available storage space, Erase SD card (format the internal memory) and select the option of enabling media scanning of external SD card or external USB devices.

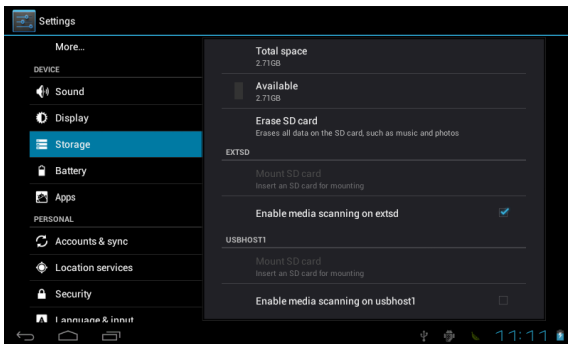


### Remarks:

1. If you want to safely remove the Micro SD card or USB flash drive, please tap on the option “Unmount SD card”, and confirm the selection, after this, you can safely remove SD card/USB host.
2. Make sure to tick the option of “Enable media scanning on extsd” and “Enable media scanning on usbhost 1”, this way, your tablet can scan and display the files in the external SD card and USB devices.


- **Battery**

 To know the battery usage information.

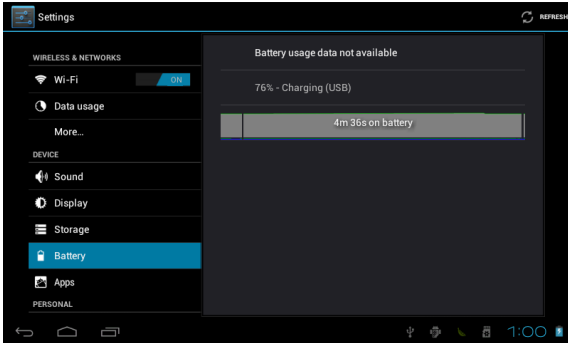

- **Apps**

 
To Manage the applications. Tap on the directories (Downloaded, On SD Card, Running or All) and select the application which you want to uninstall, you will enter into the following interface, tap on Uninstall, then you can remove that application from tablet.

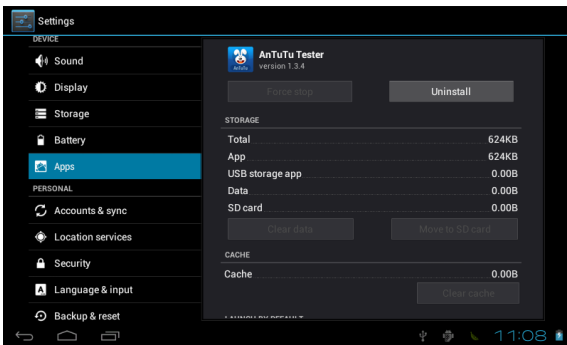

## 6.3 PERSONAL


### ● Accounts & sync

 To set up the account and synchronization information.

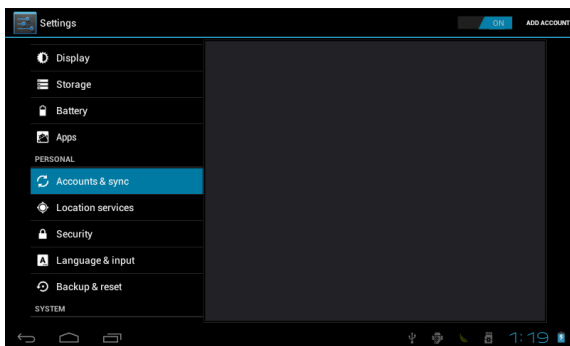

### ● Location services

 
Options for you to select “Google’s location service” and “Location & Google search”.

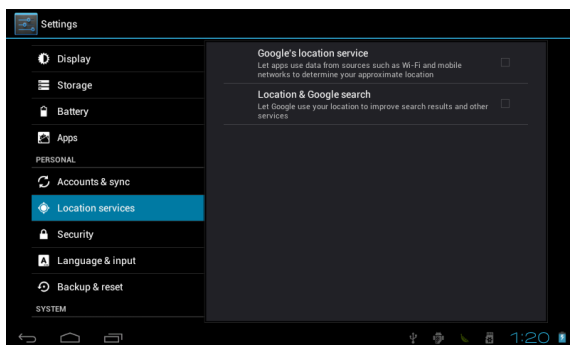




- **Security**

 Settings for Screen lock, Owner info, Encrypt tablet, Make passwords visible, Device administrators, Unknown sources, Trusted credentials, etc.

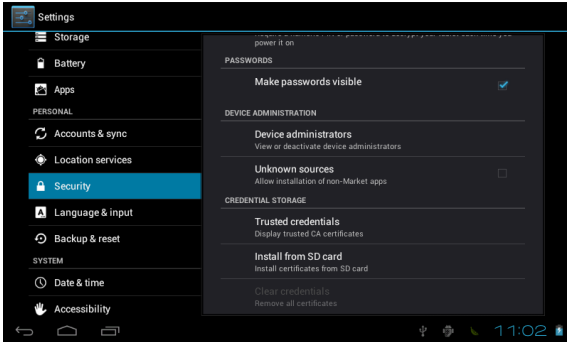


- **Language & input**

 Language selection, text input and automatic error correction option, select your desired Keyboard & Input methods, and settings on Text-to-speech output, Pointer speed.

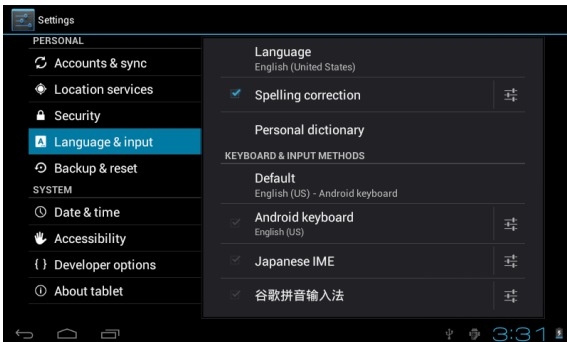

## ● Backup & reset

 Option of for backup & restore, erase personal data.

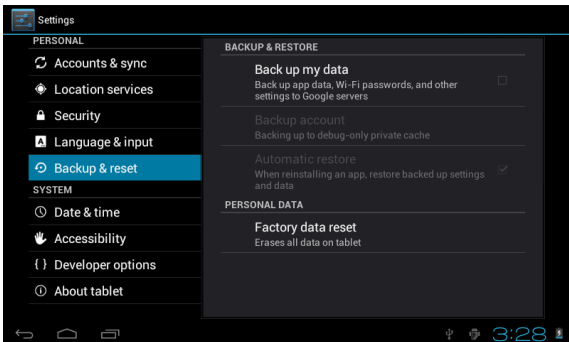

**Warning: once you perform the “Factory data reset”, it will erase all personal data in tablet, make sure to back up your personal data before performing this function.**

### Using the Reset button

 
In case your tablet interface was frozen, you can reset it using the Reset button located on the side of the tablet next to the volume control.

Use a small clip or pin to trigger the reset button, the tablet will be turned off once you trigger the reset button.

## 6.4 SYSTEM


### ● Date & time

You can use network-provided time or time zone, or you can manually setup date, time, select time zone and you can also select time and date format.

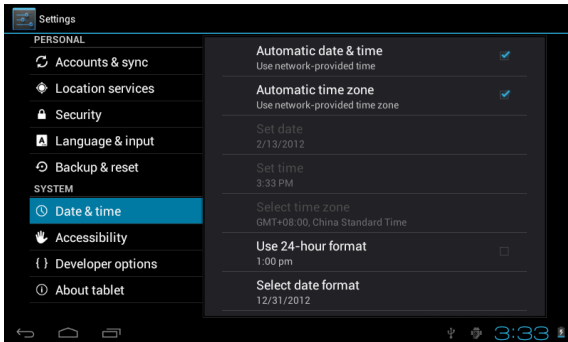


### ● Accessibility

 TalkBack provides spoken feedback to help blind and low-vision users. You can also choose the options for Large text, Auto-rotate screen, Speak passwords, Touch & hold delay time and Install web scripts.

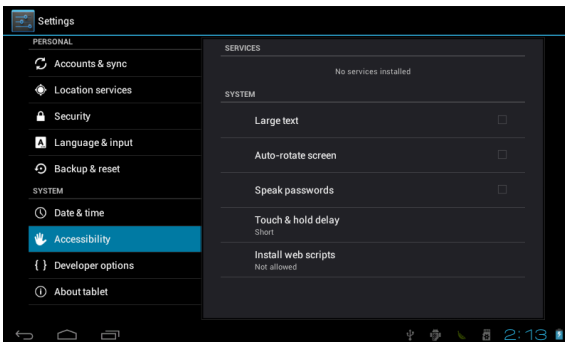


## ● Developer options

 Some advanced settings for developers.

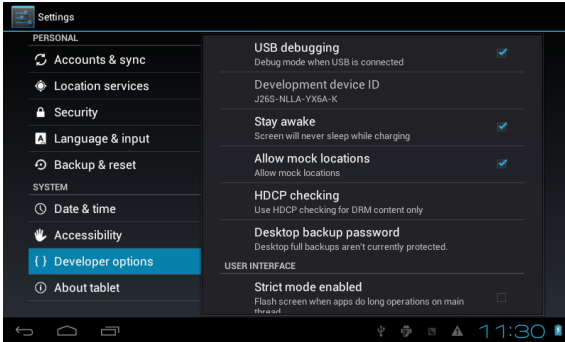

## ● About tablet

 Additional informations about the Tablet.

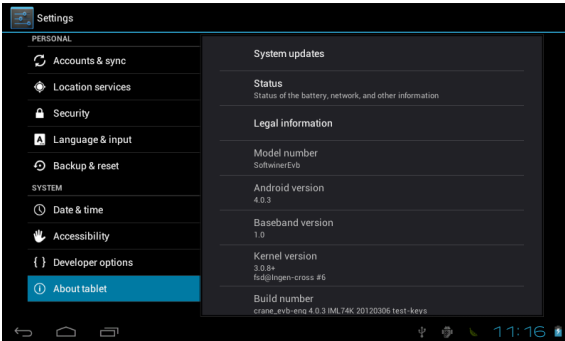

## 7 Apps Installation

You can download the Apps from online markets and install them online, or you can install the Apps from your Micro SD card or USB devices. Just tap on the App and run the installation, you can finish the installation and run that App right away.

 
## 8 Introductions of Typical Applications

The following pages describe some applications commonly installed on devices with Android operating system.

The App installed in your device, the version and features may differ from those shown here and change without notice.

### ● **Browser**

After connecting your tablet to Wi-Fi network, tap the **Browser** icon on desktop to open web browser. The following interface pops up immediately:

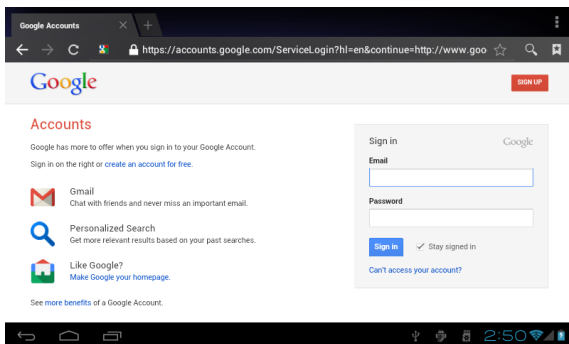

Then you can start web surfing now, during web surfing, tap on the menu icon located at the right top corner of the screen to get more options:

**New window:** to open up new window of web browser.

**Bookmarks:** to see the Bookmarks, Most visited websites and History.

**Windows:** to see different windows of web surfing.

**Refresh:** to refresh the page.

**More:** more options of “Add bookmark”, “Find on page”, “Select text”, “Page info”, “Share page”, “Downloads”, “Settings”.

## ● **Calculator**

The tablet is with built-in calculator, tap on the **Calculator** icon to carry out your calculations.

 


## ● Calendar



Users can use the Calendar to check date, time and memorandum or add memorandum etc. But before doing this, you have to sign in the Google Account.

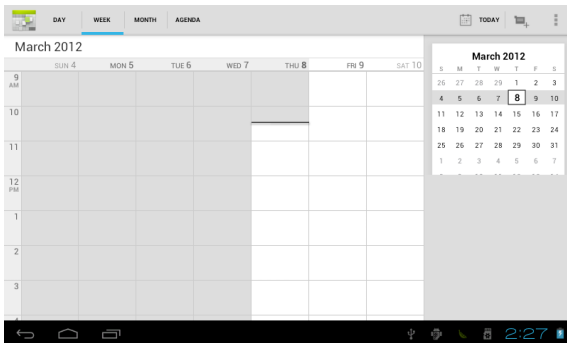

1. Tap on the Calendar icon, then a dialog box of “New a Google Account” will pop up. Tap “Next” to go the next step.
2. If you do not have a Google Account, then tap “Create” to create a new Google account, if you already had a Google Account, tap on “Sign in” to go to next step.
3. Input Gmail address and password, then tap “Next” to go forward.
4. After you finish the setup, the interface will automatically exit and return to the main interface. Tap on the Calendar icon again to check date, time and add memorandum etc. Tap on the menu button to popup more setting options of 1 Day, 7 Weeks, Agenda, Today, More, see the screen interface as below.



- **Camera** 

Tap on the **Camera** icon to run the application.

The camera is located at the center of tablet top, aim at it when you take photo or video. Tap on the circular button to start to take photo or video.

If you want to take photo, tap on the icon  to take photo; if you want to take video, tap on the icon  to take video.

The photos or videos will be saved automatically to internal memory, select “File Manager”, then select “DCIM” folder, select “Camera” to find the photos or videos just took.

You can also view your previous photos or videos by tapping on the photo icon at the top right corner of screen. When you view the photos or videos, tap on it to display more options of slideshow, delete, share, zoom in/out, clip, rotating, or set as wallpaper etc.

 




- **Clock** 


Tap on the **Clock** icon to run the application.

After running the **Clock** application, you can setup alarm clock.

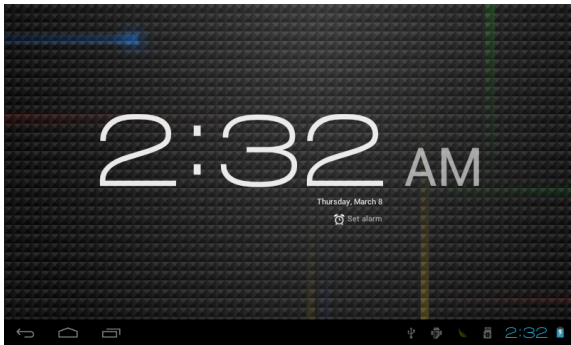

- **Downloads** 

 Tap to check all downloaded history.

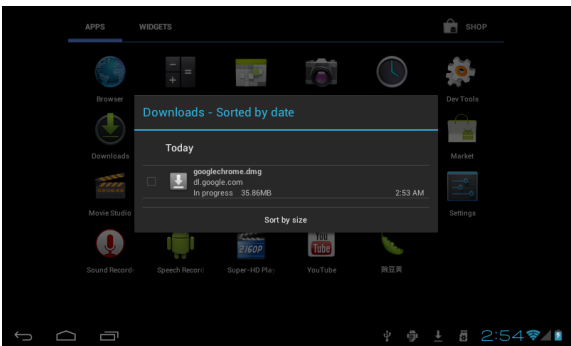

- **Email** 

You can enter one or more personal email address which you would like to access through this tablet.

Tap on **Email** icon to setup your email account according to the procedures.

You can receive or send e-mails after setup.

To read emails, tap on the **Email** icon, if you setup only one email account, it opens immediately, if you have setup multiple accounts, they will be listed in the **Accounts** screen. Tap on the desired email account, and then tap "Inbox", all emails will be listed, tap on the email which you want to open. You can also **Reply** , **Forward** or **Delete** the emails.

On the Inbox screen, you can **Compose New Email**, type on menu icon for more settings on your Email account.

- **File Manager/Explorer** 

 
Tap on **File Manager** icon to browse the files saved in your memory devices (Local, SD card or U-Disk). You can view the files by categories.



Tap on corresponding memory devices (Local, SD card or U-Disk) to see the files inside. Tapping on the file and hold it for 3 seconds, you will have the options of: **Delete File, Rename File, Copy File, Move File** and **Email File**. You can also **Copy, Move** or **Paste** files between each memory device. You can have the options of **Delete Folder, Rename Folder, Copy Folder, Move Folder, Zip Folder** when you tap on a folder and hold it for 3 seconds. How to copy file: to copy a file: tap on the file and hold it for 3 seconds, select **Copy**, then tap&hold on the folder which your file needs to be copied into, select **“Paste into folder”** to copy your file into that folder.


- **Gallery** 

Tap on the **Gallery** icon to browse for image or videos files. This application collects all images and video files stored in your device.

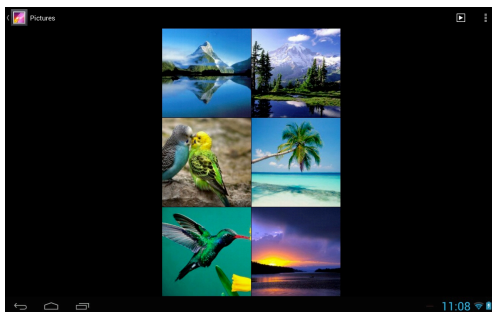

- **Search** 

 Tap on this icon and type text to search online.



- **Sound Recorder** 

To start the sound recorder, tap on the **Sound Recorder** icon.

 
Tap on the icon  to start recording.

Tap on the icon  to stop recording.

Once you stopped the recording, system will prompt: **Discard** or **Done**.


Tap on **Discard** to discard the recording; Tap on **Done** to save the recording.

The recorded files can be found at root directory of folder **File Manager**.

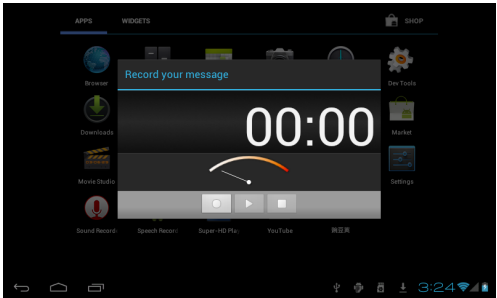

## ● Video

 To play the videos, tap on the **Video** icon to run the application. All videos will be listed and tap on your desired video to play it.

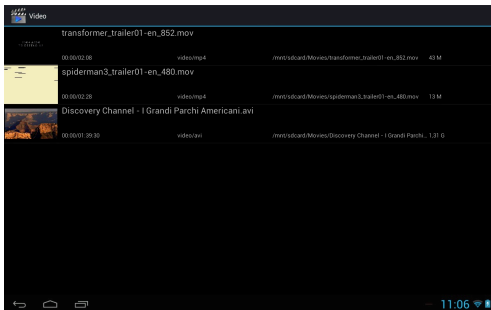

## 9 Forced shutdown

In case of your tablet was down and you are unable to turn it off according to standard procedures, press the power switch and hold it for 7 seconds, the tablet will be turned off.

## 10 Factory Reset

To restore the tablet to original factory settings and erase all personal informations, tap on "Settings" → "Backup&reset" → "Factory data reset".

**Warning:** After resetting the device, Google account, data, system settings, and downloaded applications will be removed from your tablet.

## 11 Battery Management


The battery is not fully charged from factory, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As same with all of lithium batteries, the capacity of the battery reduces each time it is charged. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Fully charge the battery regularly.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat and moisture.

## 12 Charge Battery

Plug the power adapter into an electrical wall outlet and then connect to the device to fully charge the battery before use.

When fully charged, the battery icon displays as: 

A fully discharged battery will take you approximately 6 hours, but you can use the device while it is being charged.

Do not use other adapters than the one provided in your packaging, it may cause damage to the Lithium battery inside.

Do not attempt to open the tablet to replace the battery inside, this will damage the tablet and void the warranty.

## 13 Important Safety Precautions

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Do not place other objects on LCD screen, as it may crush and damage the LCD screen.
- Do not use any sharp objects to touch the LCD screen, as this will scratch the screen.
- Only use the AC adapter included with the device. Using any other power adapters will damage your tablet and void the warranty.
- Do not attempt to dismantle the tablet by yourself to do any repair, this will damage the tablet and void the warranty.

## 14 Clean Your Device

To clean fingerprints or dust from the screen, we recommend to use soft, non-abrasive and non-corrosive cloth for cleaning, such as a camera lens cloth.

