

# Hamlet

## WIRELESS SMART TV KEYBOARD

2.4GHz Wireless RF Keyboard + Touchpad  
for Smart TV, Tablet PC, Smartphone and PC



**User Manual**  
XKK400ITA

[www.hamletcom.com](http://www.hamletcom.com)

Dear Customer,  
thanks for choosing an Hamlet product. Please carefully follow the instructions for its use and maintenance and, once this item has run its life span, we kindly ask You to dispose of it in an environmentally friendly way, by putting it in the separate bins for electrical/electronic waste, or to bring it back to your retailer who will collect it for free.



We inform You this product is manufactured with materials and components in compliance with RoHS Directive 2011/65/EU & 2015/863/EU, WEEE Directive 2002/96/CE, 2003/108/CE Italian Legislative Decree 2005/151 and RED Directive 2014/53/EU for the following standards:

EN 50663: 2017

EN 62368-1: 2014 + A11: 2017

ETSI EN 300 440 V2.2.1 (2018-07)

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-3 V2.1.1 (2019-03)



### **CE Mark Warning**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

The complete CE declaration of conformity of the product can be obtained by contacting Hamlet at [info@hamletcom.com](mailto:info@hamletcom.com).

Visit [www.hamletcom.com](http://www.hamletcom.com) for complete information on all Hamlet products and to access downloads and technical support.

Imported by: CARECA ITALIA SPA - Scandiano (RE) . Italy.

All trademarks and company names mentioned in this manual are used for description purpose only and remain property of their respective owners.

The material in this document is for information only and subject to change without notice. Specifications and appearance of the product are subject to change without prior notice.

## **Safety Instructions**

- **Warning:** product intended for indoor use. It is not water resistant!
- Keep your device away from direct or indirect (glass) sunlight.
- Keep your device dry and away from liquids and moisture.  
In case of contact with these substances, switch off the device immediately and clean it.
- To avoid electric shock, do not use the device with wet hands.
- To avoid overheating, ensure the product is properly ventilated while in operation.
- Do not put your device in a high-temperature or dusty places.
- The manufacturer refuses any liability for damages to people or things due to the improper use of the device.
- Do not use the device in the presence of strong magnetic fields.
- Keep your device and its accessories away from children. Do not allow children to use your device without guidance.
- Do not attempt to disassemble your device or its accessories. Only qualified personnel are allowed to service or repair the device.
- Do not place your device or its accessories in containers with strong electromagnetic field.
- Do not throw, beat or vibrate your device, which will damage the electron circuit board and performance.
- Use only approved batteries. Replace batteries with the same or equivalent type to avoid explosion or melting of the device.
- Clean the device with a dry cloth without using chemicals to avoid possible corrosion.
- It is recommended to use the device only in environments with temperature between 0°C ~ 35°C and humidity 10% ~ 90%.
- Do not leave or store the device in the car. Temperatures inside parked cars easily exceed the above temperature ranges.

## INTRODUCTION

Hamlet Wireless Smart TV Keyboard is a compact keyboard with a touchpad and two buttons for convenient control of the mouse able to communicate wirelessly thanks to the 2.4GHz RF wireless technology. It is the ideal solution to comfortably control devices such as Smart TV, Computer, Tablet PCs and Smartphones. The keyboard works with two common AAA batteries that provide extended use of the device and includes a nano USB receiver for the wireless connection.

## Features


- 2.4 GHz wireless technology up to 10 meters coverage
- Nano USB wireless receiver
- QUERTY keyboard with Italian layout
- Built-in touchpad with 2 mouse buttons
- ON/OFF power switch
- Powered by AAA batteries (included)
- Keyboard dimension: 366 x 121 x 18 mm
- Compatible with Windows, Mac, Android, iOS

## Package contents

- Wireless keyboard with touchpad
- Nano USB receiver
- 2 AAA batteries
- User manual

## LED indicators

1. Numeric Keypad
2. Caps Lock
3. Battery
4. Touchpad Area

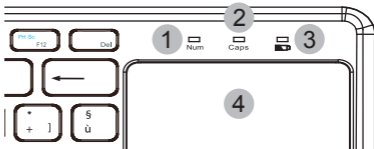

## Numeric Keypad

Press Fn+F11 keys to enable numeric keypad.

Led will be blue. Press keys combination again to disable the numeric keypad, led will turn off.

## Caps Lock

Press the Caps Lock key to enable uppercase writing mode, the blue indicator light turns on.

Press it again to turn off the led and return to lowercase writing.

## Battery


When the keyboard is turned on, the red led lights up for a few seconds.

When battery voltage is lower than 2.1 Volts, the red led flashes.


We recommend replacing the battery as soon as possible.

## Power Switch

The picture below shows the position of On/Off power switch.

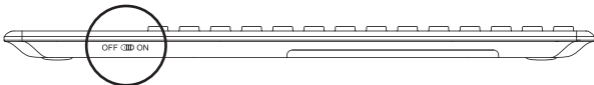

## Touchpad Mouse Buttons

 

## KEYBOARD CONNECTION

1. Plug the USB receiver into USB port of your Computer/Smart TV.  
The USB receiver is located next to the battery compartment.



2. Insert the two batteries according to the polarity signs then turn ON the keyboard using the power switch.
3. If red led flashes, the connection is successful and the keyboard is ready for use.

**Note:** If connection fails, press ESC+K keys to force pairing.

### Energy Saving (Stand-by)


















Keyboard will enter stand-by mode if not used for 10 minutes.  
Press any key to wake up the keyboard again.

If you do not plan to use the keyboard for a prolonged period of time, we recommend to turn it off and disconnect the USB receiver from the device in which it is inserted.







## FUNCTION KEYS

The Fn key located at bottom left of the keyboard allows you to activate the function keys identified by text and symbols printed in blue.

Hold down the Fn key on the keyboard and press the desired function key to type the character or activate the function.



| Fn +   |                | Fn +  |             | Fn +  |            |
|--|----------------|---|-------------|---|------------|
|  | Media Player   |  | Mute        |  | Screenshot |
|  | Play/Pause     |  | Home        |  | Page up    |
|  | Previous track |  | Search      |  | Page down  |
|  | Next track     |  | Favorite    |  | Home       |
|  | Volume +       |  | Insert      |  | End        |
|  | Volume -       |  | Number lock |   |            |

## TOUCHPAD FUNCTION (WINDOWS)

| FUNCTION                      | ACTION  | DESCRIPTION                                 |
|-------------------------------|---|---|
| Move cursor                   |  | One finger slide                            |
| Single/Double Click           |  | Single/Double click<br>(one or two fingers) |
| Horizontal or Vertical scroll |  | Two fingers slide                           |
| Zoom in                       |  | Spread two fingers apart<br>to zoom in      |
| Zoom out                      |  | Pich two fingers together<br>to zoom out    |
| Show Desktop                  |  | Slide down three fingers                    |



## TOUCHPAD FUNCTION (ANDROID)

| FUNCTION    | ACTION  | DESCRIPTION      |
|-------------|---|------------------|
| Move cursor |  | Finger slide     |
| Click       |  | One finger click |